
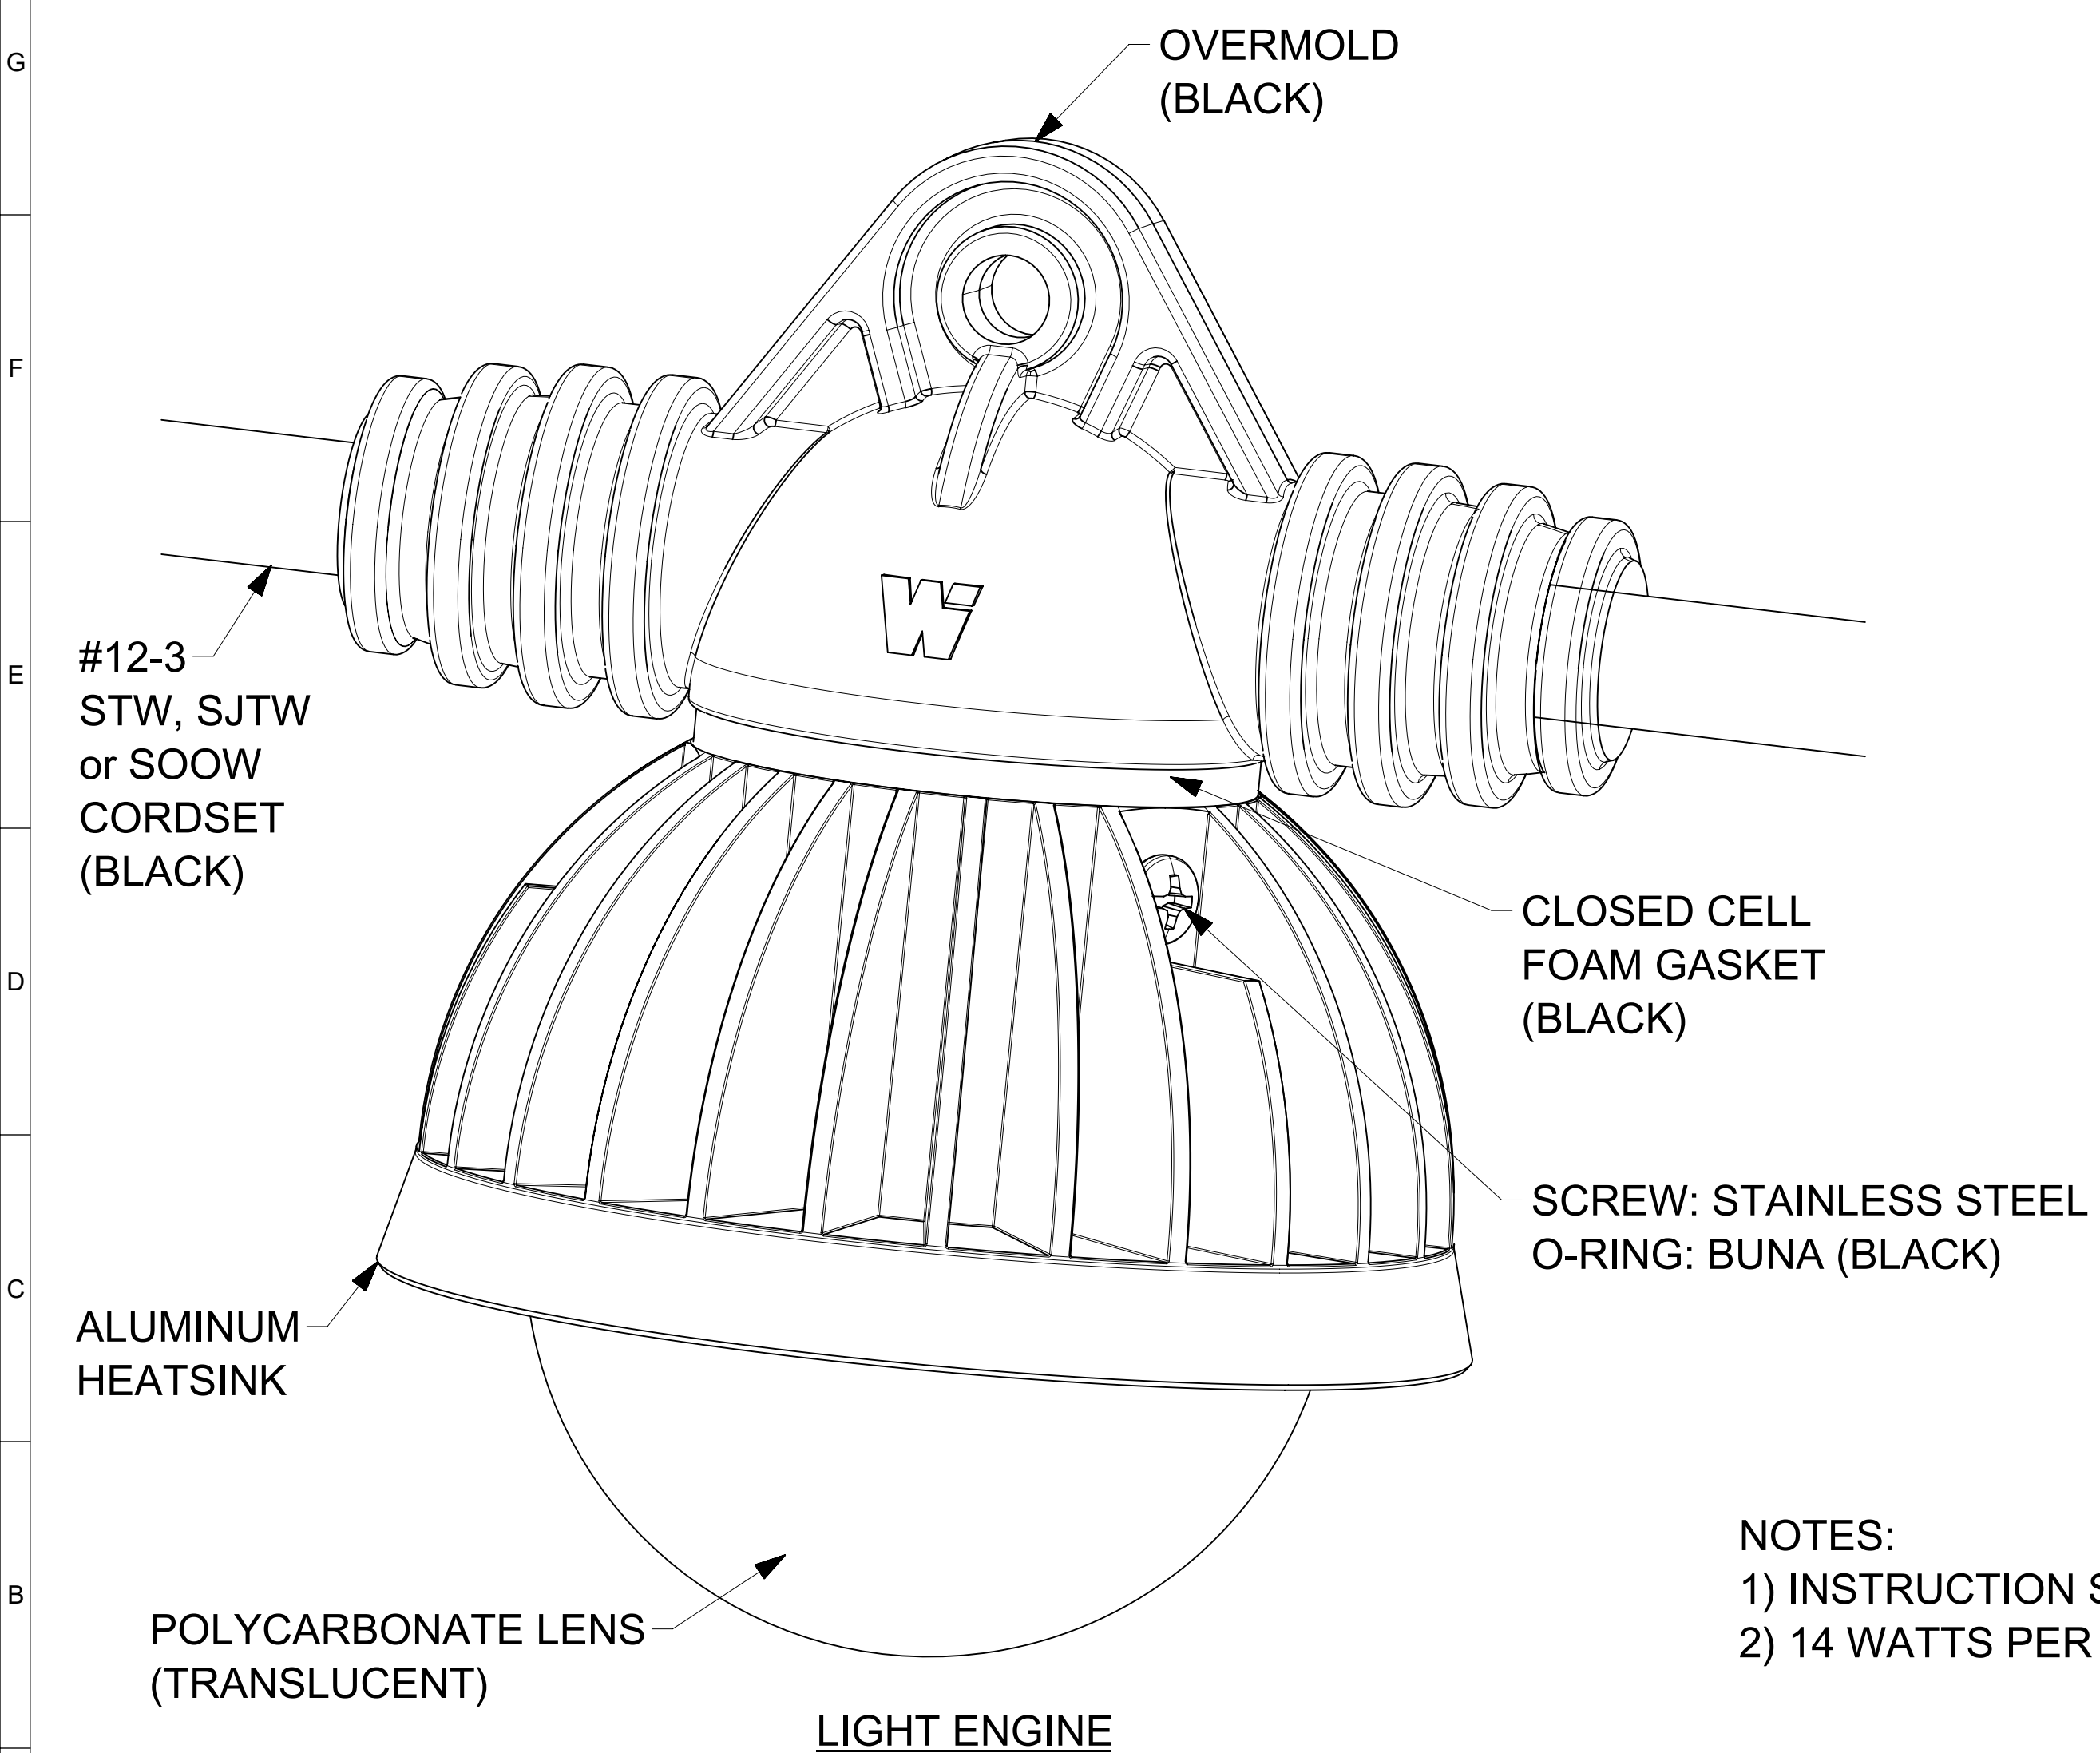
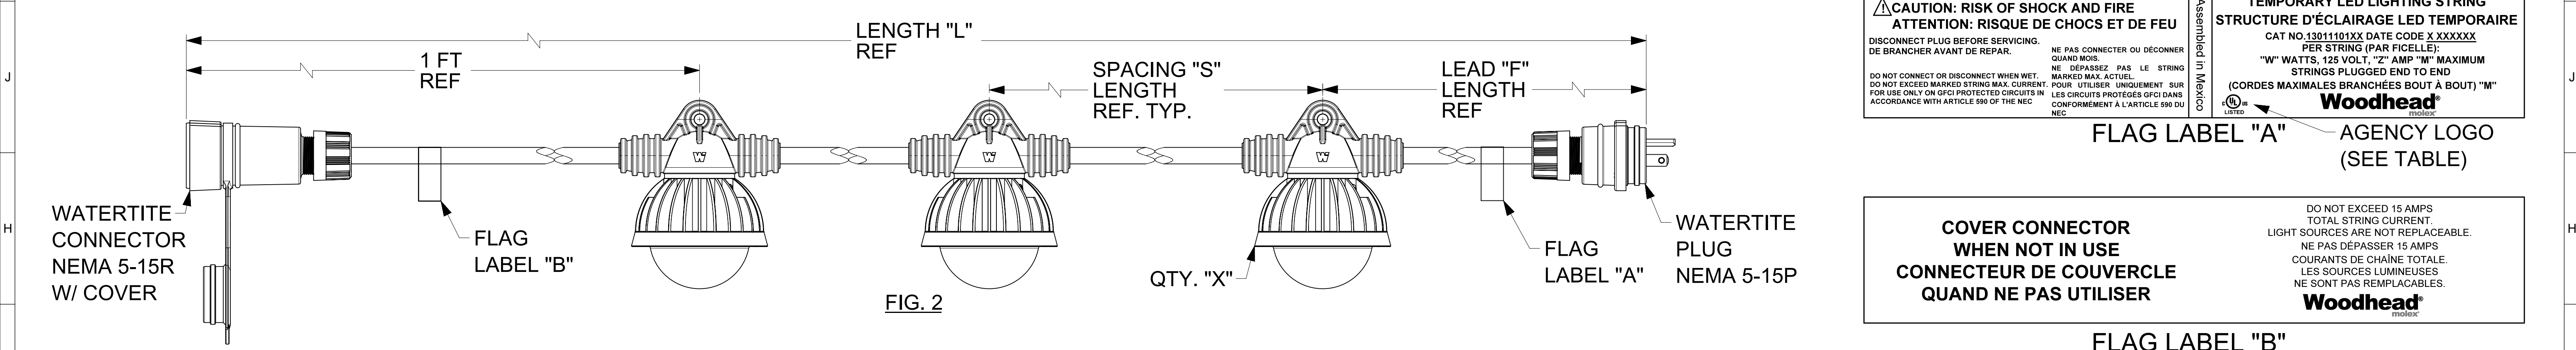


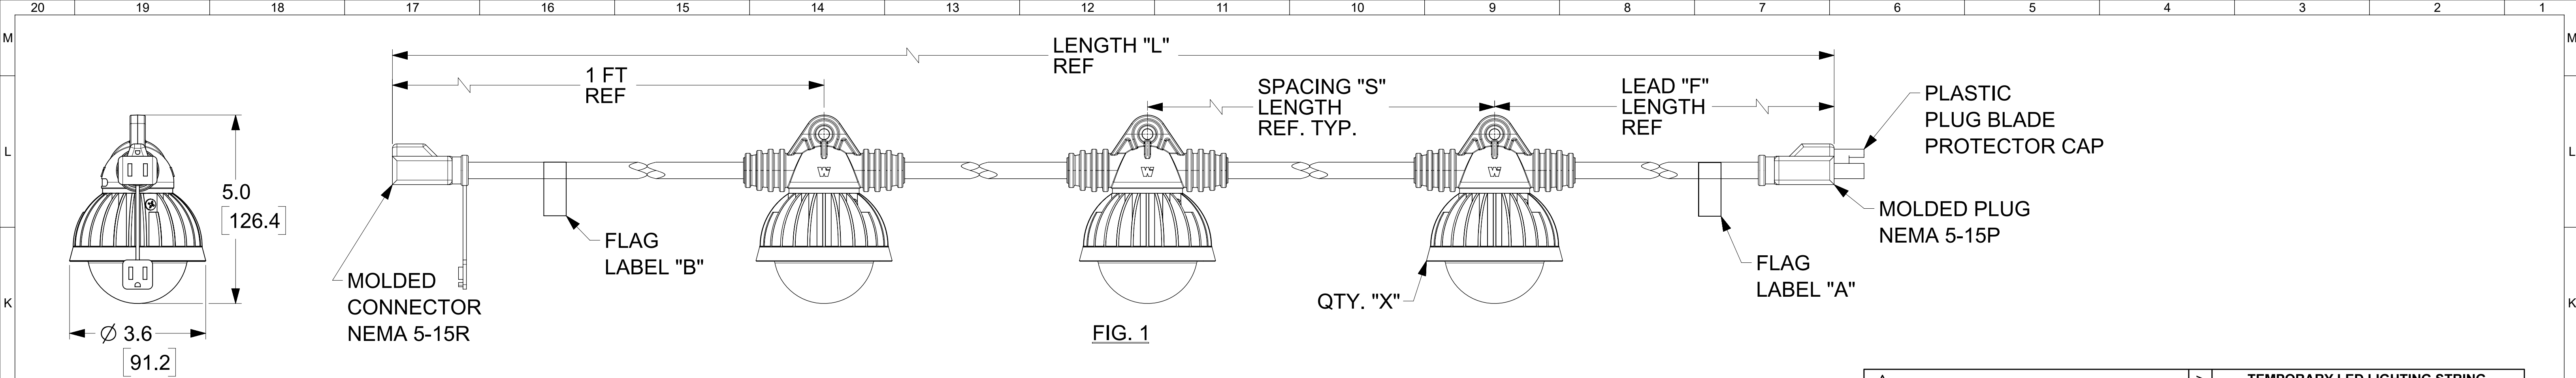

PART NO	CABLE TYPE (REF)	LENGTH "L" REF. (FEET)	QTY. "X" LIGHT ENGINE SUB-ASSY	SPACING "S" LENGTH	LEAD "F" LENGTH	WATTAGE PER LIGHT ENGINE	"Z" AMP	"M" MAX. STRINGS PLUGGED END TO END	FIG.	AGENCY LOGO (SEE FLAG LABEL "A")
1301110100	#12/3 SJTW	100	10	10 FT. REF.	9 FT. REF.	14	1.2	12	1	YES
1301110102	#12/3 STW	100	10	10 FT. REF.	9 FT. REF.	14	1.2	12	1	YES
1301110103	#12/3 STW	50	5	10 FT. REF.	9 FT. REF.	14	0.6	24	1	YES
1301110112	#12/3 SJTW	25	2	10 FT. REF.	14 FT. REF.	14	0.3	50	1	YES
1301110113	#12/3 STW	25	2	10 FT. REF.	14 FT. REF.	14	0.3	50	1	YES
1301110117	#12/3 SOOW	100	10	10 FT. REF.	9 FT. REF.	14	1.2	12	2	YES
1301110118	#12/3 SOOW	50	5	10 FT. REF.	9 FT. REF.	14	0.6	24	2	YES
1301110119	#12/3 SOOW	25	2	10 FT. REF.	14 FT. REF.	14	0.3	50	2	NO
1301110124	#12/3 SJTW	31	10	2 FT. REF.	12 FT. REF.	14	1.2	12	2	NO
1301110130	#12/3 SJTW	35.5	10	2.5 FT. REF.	12 FT. REF.	14	1.2	12	2	NO

NOTES:

- 1) INSTRUCTION SHEET: SEE DOCUMENT# 1301110100_INSTRUC.
2) 14 WATTS PER LIGHT ENGINE

THIS DRAWING CONTAINS INFORMATION THAT IS PROPRIETARY TO MOLEX ELECTRONIC TECHNOLOGIES, LLC AND SHOULD NOT BE USED WITHOUT WRITTEN PERMISSION													
DIMENSION UNITS		SCALE		CURRENT REV DESC: REMOVED OBSOLETE PART NUMBERS AS PER PCN#516220				molex					
INCH		NTS											
GENERAL TOLERANCES (UNLESS SPECIFIED)													
ANGULAR TOL		± °											
4 PLACES		±											
3 PLACES		±											
2 PLACES		±		LED STRINGLIGHT									
1 PLACE		±											
0 PLACES		±											
EC NO: 809016													
DRWN: RAVINR1				2024/12/30		PRODUCT CUSTOMER DRAWING							
CHK'D: GGA				2025/01/16									
APPR: GGA				2025/01/16									
INITIAL REVISION:				DOCUMENT NUMBER 1301110100									
DRWN: WLEUNG										2017/03/22			
APPR: JFMURPHY										2017/07/22			
DRAFT WHERE APPLICABLE MUST REMAIN WITHIN DIMENSIONS		THIRD ANGLE PROJECTION		DRAWING		SERIES		MATERIAL NUMBER		CUSTOMER		SHEET NUMBER	
				D-SIZE		130111		SEE CHART				1 OF 1	

DOCUMENT STATUS	P1	RELEASE DATE	2025/01/16	05:15:18
-----------------	----	--------------	------------	----------

Woodhead®

Instructions concernant les guirlandes de lumières à DEL



▲ **AVERTISSEMENT : POUR RÉDUIRE LES RISQUES D'INCENDIE, DE DÉCHARGE ÉLECTRIQUE OU DE BLESSURES AUX UTILISATEURS, OBSERVEZ LES CONSIGNES SUIVANTES :**

- Lire attentivement toute cette feuille d'instructions avant de commencer l'installation et conserver ces instructions.
- Utiliser cet appareil seulement de la manière recommandée par le fabricant.
- Ne pas utiliser ce produit s'il est endommagé ou si le cordon a été endommagé de quelque façon que ce soit.
- L'installation et le fonctionnement de cet appareil doivent être conformes à tous les codes du bâtiment et de l'électricité nationaux et locaux en vigueur.
- Il incombe à l'installateur de brancher cet appareil à une prise mise à la terre et protégée appropriée conformément au Code national de l'électricité® et aux codes de l'électricité locaux.
- Utiliser uniquement sur des circuits protégés par un DDFT conformément à l'article 590 du Code national de l'électricité®.

▲ **MISE EN GARDE**

- **La puissance maximale pour un seul moteur lumière est de 14 watts**
- **Plusieurs guirlandes de lumières à DEL branchées en série ne doivent pas dépasser 15 ampères ou 1800 watts**
- **Recouvrir le connecteur avec le capuchon protecteur lorsque le produit n'est pas utilisé**
- La guirlande de lumières à DEL **doit** être suspendue de manière à ce qu'aucun dommage physique ne soit provoqué par l'abrasion, l'usure ou une utilisation abusive.
- Les trous du support sont situés sur chaque moteur lumière.
- L'utilisation de crochets ou d'un câble neutre porteur est recommandée.
- Ne jamais brancher, débrancher ou réparer la guirlande de lumières à DEL dans des conditions humides.
- Toujours mettre hors tension une alimentation électrique avant de brancher, de débrancher ou de réparer la guirlande de lumières à DEL.



Woodhead®

LED Stringlight Instructions



▲ **WARNING: TO REDUCE THE RISK OF FIRE, ELECTRICAL SHOCK, OR INJURY TO PERSONS, OBSERVE THE FOLLOWING:**

- Read this entire instruction sheet thoroughly before beginning installation and save these instructions.
- Use this unit only in the manner intended by the manufacturer.
- Do not use this product if it or the cord has been damaged in any way.
- Installation and operation of this unit must be in accordance with all applicable national and local building and electrical codes.
- It is the installer's responsibility to connect this device to a suitable grounded and protected outlet in accordance with the National Electrical Code® and local electrical codes.
- For use only on GFCI protected circuits in accordance with Article 590 of the National Electrical Code®

▲ **CAUTION**

- **The maximum wattage for a single light engine is 14 Watts**
- **Multiple LED Stringlights connected in series must not exceed 15 Amps or 1800 Watts**
- **Cover Connector with Protective Cap when not in use**
- The LED Stringlight **must** be hung so that no physical damage from abrasion, wear, or abuse results.
- Hanger holes are located on each light engine.
- Use of hooks or a messenger cable is recommended.
- Never connect, disconnect, or service the LED Stringlight under wet or damp conditions.
- Always de-energize an electrical supply before connecting, disconnecting, or servicing the LED Stringlight.

